



1. Product Name

Bubble Table

2. Product Code

22892

3. Colour

Typically black exterior

4. Brief Description

Decorative and highly visually appealing feature. With continuously rising bubbles and colour changing integral lights

5. Contents

- 1 x Glass Cover
- 1 x Plastic Panel
- 1 x Metal Base
- 1 x Air pump
- 1 x 12V Adapter
- 1 x Remote Control
- 1 x Silver control box (inside the base)
- 1 x Funnel

6. Snoezelen® Stimulations

• Sight

7. Best Use

Use in a darkened environment.

8. Compatible ROMPA® Products

ROMPA[®] offers a huge range of visual and decorative items. Visit <u>www.rompa.com</u> for more information.

9. Starting Up

There are no short-cuts when setting up this product. Please read and follow all the instructions with care.

10. Detailed Description

Decorative and highly visually appealing feature. With continuously rising bubbles and colour changing integral lights; 5 modes of operation (flash, strobe, fade, smooth, static single colour (16 colours)). Adjustable brightness. Enjoy passively for relaxation, or use the table for sedate and supervised activities such as colouring, gentle play or structured educational purposes. Captivating for children and adults. Mains-operated (12V adapter included). Includes remote control. Not compatible with the ROMPA® Wi Fi range. The cover is glass and so this product is not suitable for challenging behaviours or vigorous interaction. To be filled with distilled water or boiled tap water.

11. <u>Safety</u>

- Always supervise the use of this product
- Take particular care with the top as this is glass. This product is not suitable for individuals with challenging and unpredictable behaviours. This product is not suitable for vigorous interaction.
- Do not exceed the maximum voltage and wattage indicated on the adapter.
- For indoor use only

12. <u>Technical Specification</u>

Size: 60cm diameter x 32cmH Adapter: 12V

13. Installation

Unpack carefully, ensuring that all components have been unpacked. Consider the following when choosing the location of your Bubble Table:

- Access to a plug
- Make sure use of the Bubble Table is visible and can be supervised at all times
- This is not intended to be used or stored in extreme temperatures
- For indoor use only
- 1. Place the base on a flat surface where you can access the back of the metal base.



2. Connect the pump to the white wire coming from the top of the silver box.



3. Feed the wire of the adapter through the little hole.



4. Connect the adapter to the bottom of the silver box where it says 'POWER'. Do NOT connect to the white wire.



5. Attach the plastic air tubes coming from the round plastic panel to the pump. At this point test the system – plug in the adapter to make sure the lights and pump are functioning correctly.



6. Check the outlet valve on the plastic panel is shut off, so that the water does not leak out.



7. Place the plastic panel on the metal base.



8. Fill the plastic panel with water by placing the funnel in the hole at the top of the panel. Use a clean jug or bucket (without any debris or dirt inside). Do not use hot or ice cold water.



While this product has been designed to work well with tap water, the product will need higher maintenance due to algae and the water may become cloudy. The water will need changing approximately once every few months. By using distilled water, the water will stay cleaner for longer. Do not overfill. Wipe clean afterwards and dry the plastic panel. Place the glass on top of the plastic panel.

9.



10. Use the remote to choose from 5 modes of operation (flash, strobe, fade, smooth, static single colour (16 colours)) and to adjust the brightness.

14. Care and Maintenance

- 1. The Bubble Tube is a delicate product and must be looked after and maintained to ensure trouble-free use.
- 2. Always unplug the pump and the 12V adapter from the mains socket before cleaning and handling.
- 3. Regularly empty the water out and keep the Bubble Table clean (approximately 4-6 weeks depending to the location of the table and the water used). This is a two-person task.
- 4. If the Bubble Table will be out of use for an extended period of time, disconnect the table and drain the water out.
- 5. Do not use hot or ice cold water to fill the table.
- 6. Do not lift, carry or pull the bubble feature by the power cord.
- 7. This product will not withstand extreme temperatures. Improper storage that allows water to freeze within the product may cause damage and will void the warranty.
- 8. Do not use 'hard water' and/or caustic cleaners as these can affect the paint and other finishes. Do not use bleach, chlorine and other harsh and abrasive substances inside or outside the product. Use of these will void the warranty.
- 9. As with any product, over time, the finish will gradually fade and discolour. This is not a defect, just natural ageing with use.
- 10. Use and store indoors, in dry environments only. Never immerse in water.

15. Troubleshooting

In the unlikely event of product failure, please check the following:

Problem: No bubbles coming out

- Check that the pump is plugged in correctly to the silver box
- Check that this is making a noise

If there is no sound coming from the pump, contact ROMPA[®] as a replacement pump may be required

If there is sound coming from the pump, check that the installation instructions have been carried out correctly. If all steps have been followed correctly, check the whole length of the pipe to make sure the pipe is not kinked or bent. If the pipe is free of kinks and bends, please pull off the pipes attached to the pump and feel with the back of your hand if air is coming out. If the air is coming out, re-attach the pipes and check at the other end to ensure the pipes leading into the actual table are letting out air. If no air is coming out, somewhere along the route of the pipe from the air pump to the exits is blocked. For further assistance, please contact ROMPA[®].

Follow the instructions again from the start to set your table up again. If the problem persists, contact ROMPA[®].

Problem: Remote Control does not work

• The remote control is designed to change the colours of the lights and to change the way the lights work. If the lights are on, but not changing with the remote control, move closer to the base of the table. If the remote still doesn't work, change the battery in the unit. If

the remote still doesn't work, change the battery inside. In the unlikely event that the remote control still does not work, please contact ROMPA[®].

Problem: The bubbles are working, but there is no light

- Please check the following:
 - That there are no loose connections. If all the connections are good, the silver controller box could be faulty.
 - Check that the connection at the top of the silver control box and the plastic connector of the lights are secure. If these are secure, please contact us as it may be necessary to replace the silver control box.

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com