



Life Changing Sensory Solutions For All

snoezelen®

# INSTRUCTION MANUAL

14694

**BUBBLE TUBE SUPPORT COLLAR 15CM**

15192

**BUBBLE TUBE SUPPORT COLLAR 20CM**

**01. Product Name**

Bubble Tube Support Collar

**02. Product Code(s)**

14694

15192

**03. Colour**

Transparent

**04. Brief Description**

The adjustable collar secures the bubble tube to the wall for stability and safety.

**05. Contents**

1 x collar

**06. Snoezelen® Stimulations**

Not applicable

**07. Best Use**

Use to secure a bubble tube to the wall.

**08. Compatible ROMPA® Products**

15cm:

All Bubble Tubes with a 15cm diameter.

20cm:

All Bubble Tubes with a 20cm diameter.

**09. Starting Up**

Remove any packaging, but leave any protective film in place until installation is complete.

**10. Detailed Description**

We recommend the use of this collar for further stability.

It fits over the top of the Bubble Tube and provides stability by securing it to the wall.

The length of the collar can be adjusted to accommodate different sized cushioned platforms.

Choose the appropriate collar according to the diameter of your Bubble Tube.

This product is to be purchased separately from the Bubble Tube.


**11. Safety**

Do not apply weight or exert pressure on the collar.

Do not overtighten fixings.

## 12. Technical Specification

Wall to centre line of tube:  
15cm - 245mm to 363mm  
20cm - 225mm to 343mm

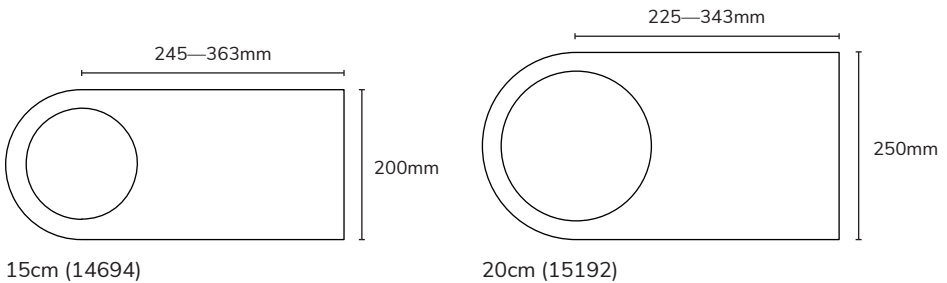

## 13. Installation

01. Choose a suitable location for your collar. Ideally it needs to be towards the top of your bubble tube, but not at the very top.
02. Slip the collar over the top of the bubble tube and set at the desired height.
03. Loosen the wingnuts and adjust the collar to the appropriate length. Lightly fasten the wingnuts.
04. Mark the position of the screw holes on the wall.
05. Remove the collar and store in a safe place.
06. Ensure there are no concealed pipes or cables in the area to be drilled.
07. Drill holes in the wall as marked.
08. Slide the collar back into place and attach to the wall using fixings appropriate to the construction of your wall (to be purchased separately). Take care to avoid overtightening the fixings, as this may damage the unit.
09. Fully tighten the wingnuts to secure the Bubble Tube in place.
10. Remove the plastic film.

## 14. Care and Maintenance

Wipe clean with a soft, slightly dampened cloth.  
Avoid abrasive cleaning products that could scratch the plastic.  
Check the wingnuts periodically to ensure they remain tight.



Life Changing Sensory Solutions For All

**snoezelen**<sup>®</sup>

**Rompa<sup>®</sup> Limited**  
**Unit 1-4 Carrwood Industrial Estate,**  
**Carrwood Road, Chesterfield, S41 9QB**

**[customer.service@rompa.com](mailto:customer.service@rompa.com)**

**14694\_29102025**

**[www.rompa.com](http://www.rompa.com)**